


TOP AND CABINET PARTS

For Model: LSR6333LQ0 (Designer White)

Illus. No.	Part No.	DESCRIPTION
1 Follo	LIT3952817 LIT3951578 LIT3955155 LIT3954821 LIT3955498 LIT3955552	Literature Parts Installation Instructions English French Use & Care Guide English French Wiring Diagram Energy Guide / Be Purchased
	LIT4313896	Manual, Do-It Yourself (Washer)
2 3	8271378 62750	Top Spacer, Cabinet To Top (4)
4 5 6	357213 63424 62780	Nut, Push-In (2) Cabinet Clip, Top & Cabinet
7 8	3357011 3356311	& Rear Panel (2) Screw, 10–16 x 1/2 Screw & Washer, Lid Switch (2)
9 11 13	3362952 3949237 3351355	Dispenser, Bleach Switch, Lid Screw, Lid Hinge Mounting (4)
15 16 17 18	54584 91770 19119 21258	Hinge, Lid (L.H.) Hinge, Lid (R.H.) Bumper, Lid Hinge Bearing, Lid
19 20 22 28 31	3954489 358684 9724509 3390631 90016	

CONTROLS AND REAR PANEL PARTS

For Model: LSR6333LQ0 (Designer White)

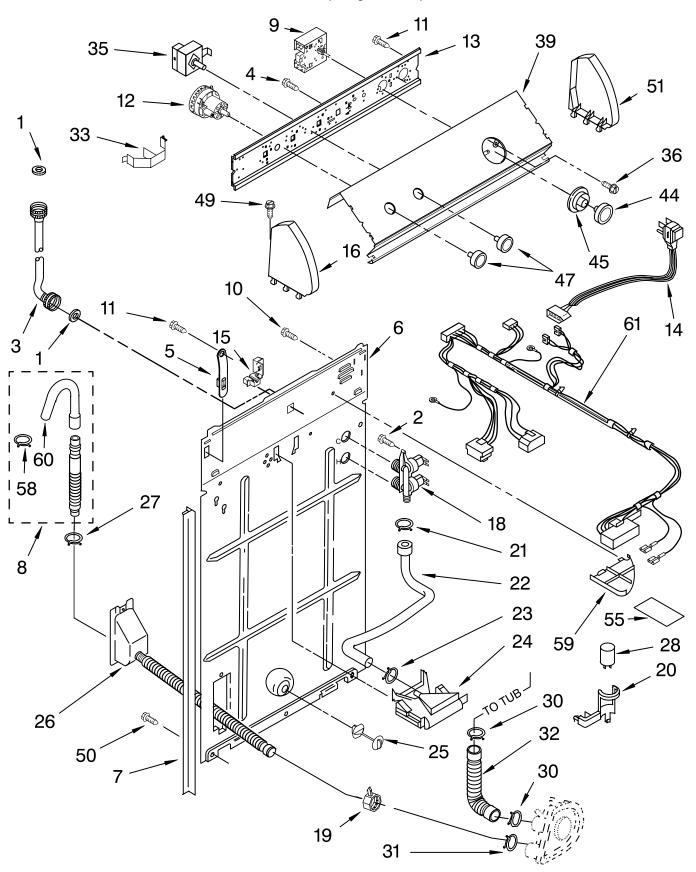


CONTROLS AND REAR PANEL PARTS

For Model: LSR6333LQ0 (Designer White)

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
4	2070200	\\\-\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\						
1	3976300	Washer, Water	10		Screw, Ground	31		Clamp, Hose
		Inlet Hose (4)	11		Screw, 8-18 x 3/8	32		Hose, Pump To Tub
_	0740040	$(1-1/16 \times 5/8)$	12		Switch, Water Level	33	8055003	Clip, Harness
2 3	9740848	Screw, 8–18 x 1/2	13		Bracket, Control			& Pressure Hose
3		Hose, Water	14		Cord, Power	35	661612	Switch, Water
	0040074	Inlet (2)	15	3952821	Strain Relief,			Temperature
		Blue Coupler			Power Cord	36	3400818	Screw, Timer
		Red Coupler	16		Cap, End (L.H.)			Mounting
4		Screw, Ground	18	3952164	Valve, Water	39		Panel, Console
5		Strap, Console (2)			Mixing	44	8271345	Knob, Timer
6		Panel, Rear	19		Clamp, Hose	45	8271351	Dial, Timer
7		Pad, Rear Panel	20	8318201	Clip, Capacitor	47	8271339	Knob, Control
8	3951609	Hose, Drain	21	370451	Clamp, Hose	49	388326	Screw, 8-18 x 1.25
		(4 ft.)	22	3357328	Hose, Vacuum			(Panel to Top)
	661577	•			Break	50	62863	Screw, 10-16 x 3/8
		(9 ft.)	23		Clamp, Hose	51	8271359	Cap, End (R.H.)
		(Not Included)	24	387606	Break, Vacuum	55	3976286	Shield, Capacitor
	3357090	Extension	25	8519200	Support, Rear	58	3366913	Clamp, Drain
		Drain-Hose			Panel			Hose
		(21 Inches)	26	8317940	Drain Hose	59	3348424	Shield, Suds
		(Not Included)			Assembly	60	3357027	Nozzle-Drain
9	3955489		27	3366912	Clamp, Hose			Hose
		(60 Hz.)	28		Capacitor,	61	3955491	Wiring Harness
		(Motor Not A			Motor Start			(For Detail See
		Service Part)	30	3363366	Clamp, Hose			Pages 9 & 10)

AGITATOR, BASKET AND TUB PARTS

For Model: LSR6333LQ0 (Designer White)

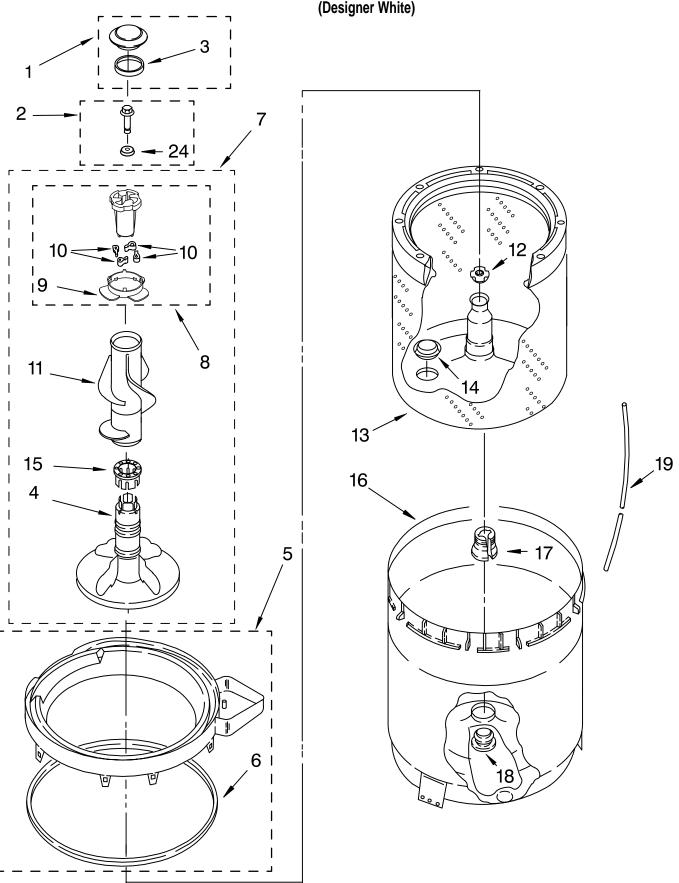

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS For Model: LSR6333LQ0 (Designer White)


Illus. No.	Part No.	DESCRIPTION
1	63973	Cap, Agitator
2	358237	1 / 3
		(5/16-24 x 1)
3	358912	Seal-Cap
3 4	389386	Agitator .
5	63851	Tub Ring & Gasket
6	3359585	Gasket, Tub Ring
7	3347674	Agitator Assembly
		(Complete)
8	3363662	Cam-Driven
9	3363661	Bearing-Driven Cam
10	3366877	Dog-Agitator
11	389141	Auger-Agitator
12	21366	Nut, Spanner
13	3951989	Basket & Balance
		Ring
14	8522271	(Also Order #14)
15	3350389	Filter Plug Spacer–Thrust
16	63849	Tub
17	389140	Block, Basket
17	303140	Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure
		Switch
24	3949550	Washer

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS For Model: LSR6333LQ0 (Designer White)

			(Designer white)			
Ø	Illus.	Part		Illus.	Part	
	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
	140.	NO.	PESCRIF HON	-140.	INU.	PEOCIVIE HON
	1	388052	Brake & Drive	1 40	0057004	0
	'	300932	Tube (Complete)	10	3357334	Screw, Gearcase
			(Refer to Page 11	11	62611	To Base (3) Plate, Motor
			For Further	''	02011	Mount To
1 _ 7/4 km			Breakdown)			Gearcase
	2	63292	Washer, Spin	12	62691	Grommet, Motor (4)
2			Tube Thrust	13		Coupling, Motor
	3	62697	Ring, Spin			& Isolation
3	4	00000	Tube Support	15	3355454	Clip,
- -	4	63283	Ring, Retainer			Anti-Rattle
4	5 6	2051211	Clutch (Complete) Band & Lining,	16	3400516	
4	O	3931300	Clutch (Includes	17	3349637	Retainer, Motor (2)
			Illus. 7 & 8)	18	3362089	Shield, Tub
5	7	62646	Cap, Clutch	19	9529157	To Motor Motor, Main
7	-		Spring (2)	19	0320137	Drive
	8	3946792	Spring, Clutch	20	3952056	Switch, Main
	9	3360630	Gearcase	-	0002000	Drive Motor
			(Complete)	21	62700	Retainer, Pump (2)
16 8			(Refer To Page 12	22	3363394	Pump (Complete)
15			For Further	23		Screw, 10-16 x 5/8
			Breakdown)	24	3946532	Shield, Motor
9 10 11/12 13 24	_		-16 17		20	18 3 19 21 22 21
			23			♥


MACHINE BASE PARTS

For Model: LSR6333LQ0 (Designer White)

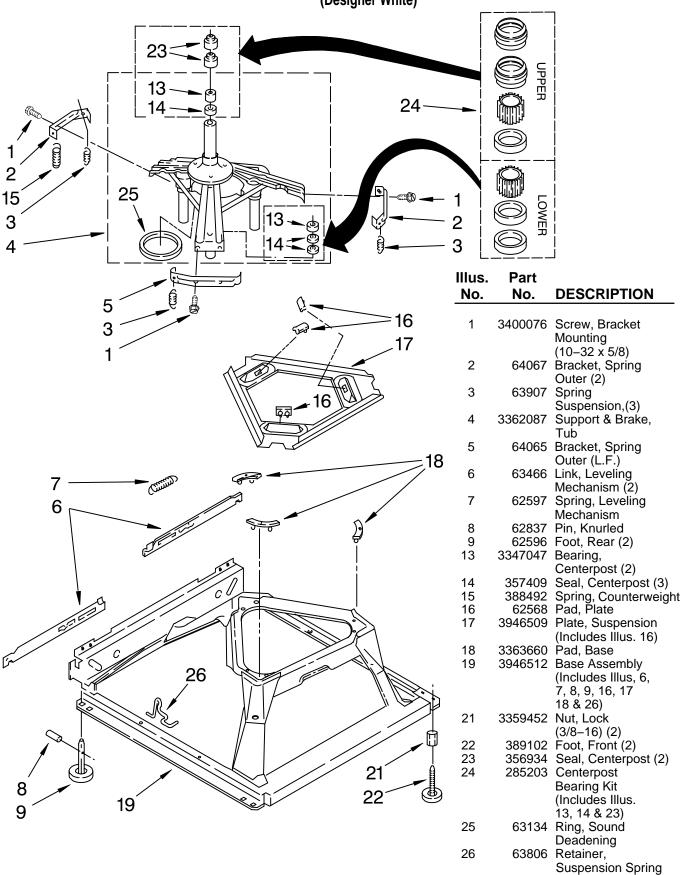

WIRING HARNESS PARTS

For Model: LSR6333LQ0 (Designer White)

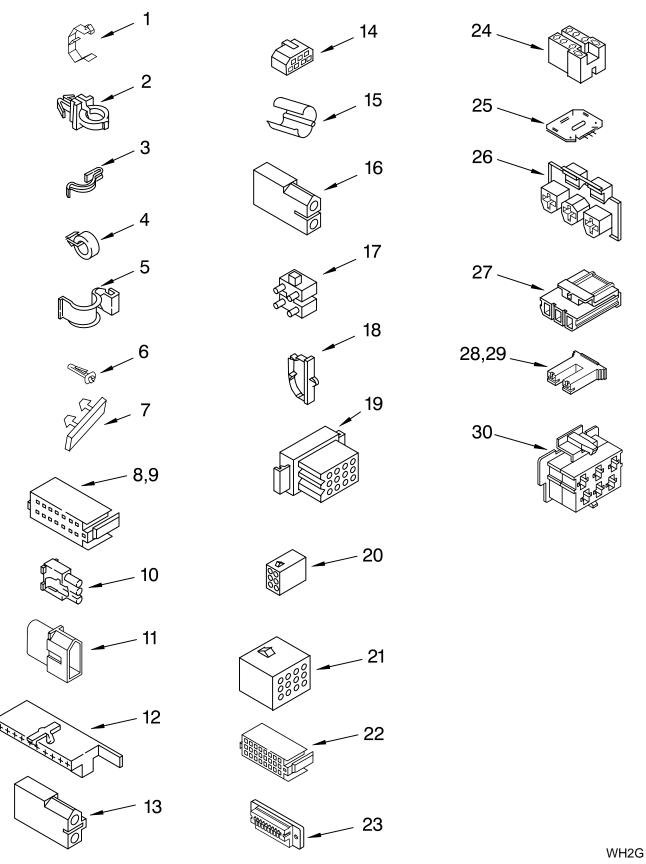

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Model: LSR6333LQ0 (Designer White)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
110.	INO.	DESCRIPTION	110.	INO.	DESCRIPTION	110.	INU.	DESCRIPTION
1 2 3	388498 3347812	Clip, Harness Clip, Harness Clip, Harness	13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613	23 24	60687	Connector, Etc Connector, Relay (Use Term.308569)
4	3352501	Clip, Harness	14	2247242	Or 94614.)	25		E.T.C. Control
5	90016	Clip, Harness	14	3347243	Block, Disconnect (Use Term. 352088)	26	3948617	
6 7		Clip, Harness Retainer, (Suds Models)	15 16		Protector Connector			(3–Circuit) (Lid Switch) (Use Term. 3948619
8	352090	Timer, Block Disconnect			(2-Way) (Use Term.94614)	27	3360056	OR 3948620.) Connector (T.P.A)
9	352089	(White) Timer, Block Disconnect (Black)	17	387566	Plug, Terminal (4–Way) (Power Cord) (Use M3 Screws)			(3–Circuit) (Pressure Switch) (Use Term.3948619 OR 3948620.)
10	62889	Receptacle, Terminal (3–Way) (Lid Switch)	18 19		Clip, Harness Block, Disconnect (12-Way) (Timer)	28 29	3354925 3354926	Block, Connector (Cold Valve) (Use Term.693217) Block, Connector
		(Use Term.94613) Or 94614.)	20	3347730	(Use Term. 94613) Receptacle			(Hot Valve) (Use Term.693217)
11	353424	Plug, Terminal (3-Way)	04	200040	(6-Way) (Use Term. 94613)	30	3948615	Connector (T.P.A.) (6–Circuit)
12	62505	(Power Cord) (Use Term.94613)	21	300010	Plug, Terminal (12-Way) (Use Term. 94613			(Temp. Switch) (Use Term.3948619
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	22	3369366	Or 94614.) Timer, Block Disconnect (Black) (Amp) (Use Term.3369365)			OR 3948620.)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2G

BRAKE AND DRIVE TUBE PARTS

For Model: LSR6333LQ0 (Designer White)

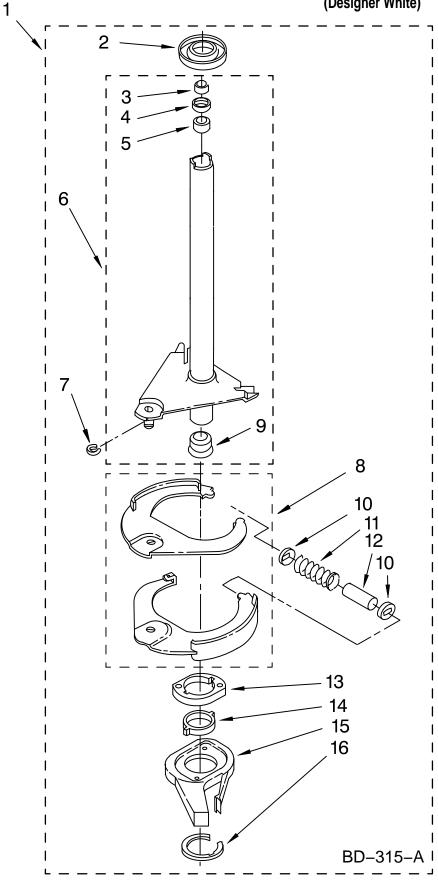

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
2 3 4	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes
_	0.4005	Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8 9	64232	Shoe, Brake
9	62703	"T" Bearing,
10	62648	Spin Tube Cap, Brake
		Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake
		Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake
		Cam
16	90368	Ring, Retaining
	FOLLOV	VING PARTS
		USTRATED

285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)


GEARCASE PARTS


For Model: LSR6333LQ0 (Designer White)

<u>-</u>		- ¬		1	
;	4 22			_	
2		l I	Illus. No.	Part No.	DESCRIPTION
i 1	3	i			
		l I	1	3360630	Gearcase (Complete)
5	6 23	į	2	285202 3349985	Cover, Gearcase Seal, Gearcase Cover
'	7 24		4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
	8 - 25	l I	5	63320	Pinion, Spin (Includes Illus. 25)
i	9 26	i	6	356427	Seal, Spin Pinion
	10 - 20	 _	7	389387	Shaft, Agitator (Complete)
! ;	9		8 9	90369 62677	Ring, Retaining (2) Retainer, Spring
	11		10 11	62676 63273	Spring, Agitate Gear, Agitate
<u> </u>	12	 - -	12	62619	(Includes 15 and 29) Washer, Agitate
	13	 	13	62580	Gear Cam Follower
1	14]	14	62581	(Includes 14) Cam, Agitate
			15	285509	(Includes 13) Shaft, Agitator
			16	62618	(Includes 11 and 29) Washer, Cam Thrust
		ļ¦	17 18	16018 85529	Bearing, Thrust Ball, Bearing
	15	 7	19	389230	Bottom and Pinion, Gearcase
	15	' ! !	21 22	285352 3351614	Seal, Thrust Plug Screw, Gearcase Cover, Mounting (8)
i l	16 28	3	23	3362552	(10-24 x 3/8) Ring, Retaining
	29	l I	24	285735	Washer Kit, Thrust
i ļ	8	i	25 26	62570 388253	Gear, Spin Neutral Assembly
17 -		 	27 28	3349296 62621	Rack, Connecting Actuator, Shift
; 18 -		i	29	388815	Washer, Intermediate
 		l I			
i	21	İ			
i		i			
 	4 GC-215-	C I			
L					

WATER SYSTEM PARTS

For Model: LSR6333LQ0 (Designer White)

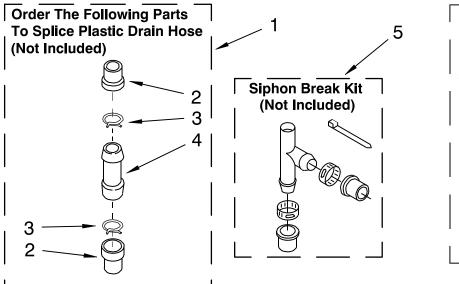

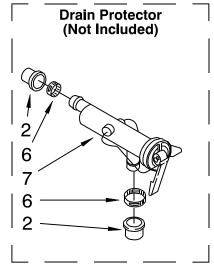


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit
6 7	65349 367031	(Not Included) Clamp, Hose Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Model: LSR6333LQ0 (Designer White)

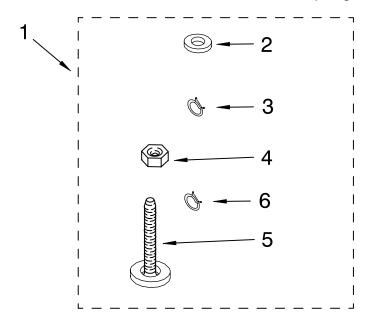

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous Parts Bag
2	3976300	
		(1-1/16 x 5/8) (4)
3	3366912	Clamp, Hose
4		Nut, Lock
		(3/8–16)
5	389102	Foot, Front (2)
6	3366913	Clamp, Hose
		•

OPTIONAL PARTS (NOT INCLUDED)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
PAINT, TOUCH-UP (1/2oz.)	OIL	SEALER
72017 White	350572 Oil, Gearcase	285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)
PAINT, PRESSURIZED SPRAY	(16 Oz.)	
(12 oz.)	LUBRICANT	SHIPPING KIT
350938 Primer, Gray	285208 Lubricant (Use	3348675 Shipping Kit
350930 White	Only in Brake	ACCESSORY PARTS
PAINT, BULK (1 qt.)	Shoe Assembly On Roller and	63580 Fabric Dispenser
799344 White (Uncut)	Pin)	367031 Drain Protector 285320 Siphon Break Kit